

AMC1210EVM

Contents

1	EVM Overview	1
2	EVM Operation.....	3
3	AMC1210 Modular EVM Bill of Materials.....	4

1 EVM Overview

The AMC1210 modular evaluation module (EVM) provides four modulator channels from the ADS1204 for the AMC1210. Two are designated for resolver applications and two are designated for current measurements. All interface modes of the AMC1210 are provided.

The new modular EVM form factor allows for direct evaluation of the AMC1210's performance and operating characteristics. This EVM is compatible with the HPA-MCU Interface Board ([SLAU106](#)) from Texas Instruments.

- Four modulator channels provided by ADS1204
- All AMC1210 interface modes available
- Direct operation with a variety of DSK and microcontroller platforms from Texas Instruments
- All four ADS1204 channels have an input range of 0 V to 5 V.

1.1 Analog Interface

The AMC1210 modular EVM is designed for easy interfacing to resolvers and current sensors. Connector J05 is a 9-pole DSUB jack for easy connection to standard resolvers. To hold the floating resolver inputs to a predefined common mode level, a 2.5-V voltage is added on the resolver inputs.

Signal		Description
J05.1	IN1+	Positive sine wave input
J05.2	IN1–	Negative sine wave input
J05.3	IN2 +	Positive cosine wave input
J05.6	PWM1	Positive carrier wave output
J05.7	PWM2	Negative carrier wave output
J05.8	IN2–	Negative cosine wave input
Shield	PE	Cable shield

At the connectors J03 and J04, analog current sensor signals can be connected.

Signal		Description
J03.1, J04.1	IN3+, IN4+	Positive current input signal
J03.2, J04.2	PE	Cable shield
J03.3, J04.3	IN3–, IN4–	Negative current input signal

J07 is a dummy connector for mechanical stability purposes only.

The inputs of the ADS104 are secured against voltage peaks through clamp diodes.

1.2 Digital Interface

The AMC1210 modular EVM is designed for easy interfacing to multiple control platforms. Through the connectors J09 and J08, the AMC1210 can be configured through a SPI interface from a F2812 type DSK.

Signal		Description
J08.1	CLK	System clock
J08.2	SH2	Sample-and-hold signal 2
J08.7	SH1	Sample-and-hold signal 1
J09.3	SPICLK	SPI clock
J09.7	SPISTE	SPI frame sync
J09.11	SPIDIN	SPI input data
J09.13	SPIDOUT	SPI output data
J09.14	RST	Asynchronous reset input
J09.15	ACK	Data acknowledge output
J09.19	INT	Interrupt output

Through J08, J09, J10, and J11, the AMC1210 can be configured through one of three different multiplexed parallel interface modes.

Signal ⁽¹⁾		Description
J08.1	CLK	System clock
J08.2	SH2	Sample-and-hold signal 2
J08.7	SH1	Sample-and-hold signal 1
J09.14	RST	Asynchronous reset input
J10.1	CS	Chip select
J10.3	WR	Write signal
J10.5	RD	Read signal
J11.1	AD0	Address/databus bit 0 (LSB)
J11.3	AD1	Address/databus bit 1
J11.5	AD2	Address/databus bit 2
J11.7	AD3	Address/databus bit 3
J11.9	AD4	Address/databus bit 4
J11.11	AD5	Address/databus bit 5
J11.13	AD6	Address/databus bit 6
J11.15	AD7	Address/databus bit 7 (MSB)
J09.15	ACK	Data acknowledge output
J09.17	ALE	Address latch enable
J09.19	INT	Interrupt output

⁽¹⁾ All even pin numbers of the connectors J10, J11, J12, and J15 are grounded.

All digital signals can be accessed through the connectors J12, J13, J14, and J15 on the top of the AMC1210 modular EVM. The different signals are placed at the same position as the bottom-mounted connectors, see the preceding tables.

For higher frequencies on the CLK input of the AMC1210, it could be possible to reduce the value of the series resistor R47.

1.3 Power Supply

The AMC1210 modular EVM requires two supply voltages and two optional supply voltages. A 5-Vdc voltage is needed for the ADS1204 and the core of the AMC1210. A variable supply in the range of 2.7 Vdc to 5 Vdc is needed for the interface pins of the AMC1210. In addition, a ± 15 -V supply is necessary if the PWM driver operational amplifier OPA1632 is used. If the AMC1210 modular EVM is used in combination with the HPA-MCU Interface Board, J06 provides connection to the common power bus described in the document [SLAU106](#).

When used as a stand-alone EVM, the power supplies can be applied to J01 and J02. While filters are provided for all four power supplies, optimal performance of the EVM requires a clean, well-regulated power source.

2 EVM Operation

To configure a desired interface mode of the AMC1210 the jumpers JP09, JP10, and JP16 are used.

Jumper			Description
JP09	JP10	JP16	
Open	Open	Open	SPI interface mode
Open	Closed	Closed	Parallel interface mode 1
Closed	Open	Closed	Parallel interface mode 2
Closed	Closed	Closed	Parallel interface mode 3 (Factory default condition)

The jumpers JP01, JP06, and JP11 determine the clocking scheme of the ADS1204.

Jumper			Description
JP01	JP06	JP11	
1-2 Closed	Open	Open	The ADS1204 gets the clock from AMC1210 pin CLK4.
2-3 Closed	Open	Closed	The ADS1204 gets the system clock. (Factory default condition)
2-3 Closed	Closed	Open	The ADS1204 works with its internal clock.

The jumpers JP07 and JP08 choose the driver of the PWM output pins for the resolver carrier signal.

Jumper	Description
JP07, JP08	
1-2 Closed	The PWM signal is driven directly from the AMC1210.
2-3 Closed	The PWM signal is driven by the operational amplifier OPA1632. (Factory default condition)

The AMC1210 can drive up to 100 mA directly from the pins PWM1 and PWM2. The purpose of the operational amplifier OPA1632 is for the ability of filtering the carrier signal and still be capable of driving 85 mA. If the OPA1632 operational amplifier is not used, the ± 15 -V supply can be left unconnected. In this case, it is recommended to remove the resistors R24 and R26 to prevent latchup effects in the operational amplifier and nonlinearities on the PWM outputs.

The jumpers JP02, JP03, JP04, and JP05 determine if the current sensor signals will be buffered or connected directly to the ADS1204 inputs.

Jumper		Description
JP02, JP03, JP04, JP05	JP12, JP13, JP14, JP15	
1-2 Closed	Closed	The current sensor signal is buffered. (Factory default condition)
2-3 Closed	Open	The current sensor signal is unbuffered.

The ADS1204 has a reference input pin for each channel and a reference output pin. This reference input pin normally is direct connected to the 2.5-V reference output pin through a buffer and a RC-low-pass filter. If the input signal span is from either the resolver or the current sensor, a resistive divider can be added to reduce the reference voltage at the input pin. The resistor R53 has to be soldered in to reduce the reference voltage for the resolver channels. The resistor R55 has to be soldered in to reduce the reference voltage for the current sensor channels.

3 AMC1210 Modular EVM Bill of Materials


The following table contains a complete bill of materials for the AMC1210EVM.

Designators	Description	Manufacturer	Mfg. Part Number
C01, C14, C16, C25, C034	10 μ F, size A, tantalum, 16 V, 10%	Kemet	T491A106K016AS
C02, C04, C06, C08, C09, C15, C17, C18, C20, C22, C26–30, C35, C36, C44 C45	100 nF, 0805, ceramic, 50 V, 10%, X7R	TDK	C0805C104K5RAC
C10–C13	22 pF, 0805, ceramic, 50 V, 10%, COG	TDK	C0805C220K5GAC
C19, C21	10 μ F, size C, tantalum, 20 V, 10%	Kemet	T491C106K020AS
C23, C24	1000 pF, 0805, ceramic, 50 V, 10%, X7R	TDK	C0805C102K5RAC
C31–C33, C43	33 μ F, size D, tantalum, 16 V, 10%	Kemet	T491D336K016AS
C37–C42	1 μ F, 0805, ceramic, 16 V, 10%, X7R	TDK	C0805C105K4RAC
D01	Zener diode, 7.5 V, 1.3 W	Fairchild	BZX85C7V5
D02,D03	Zener diode, 18 V, 1.3 W	Fairchild	BZX85C18
D04–D09, D15, D16	Small signal diodes, SOT23	Fairchild	BAV99
D10–D13	LED, SMT 1206, Green	Kingbright	KPTD-3216CGCK
D14	Zener diode, 5.1 V, 1.3 W	Fairchild	BZX85C_5V1
F1-F4 (Optional - not installed on production EVMs)	Filter, EMI suppression, 0.5 MHz-1 GHz, 50 VDC, 10AM	Murata	BNX002-01
J01-J04	3 Terminal screw connector	OST	ED1515
J05	DB9, RTANG RECPT 0.318 W/ STD HDWR	Assmann	ADF09LLF
J06 (bottom side)	5 pin, dual row, SMT socket	Samtec	SSW-105-F-D-VS-K
J07–J10 (bottom side)	10 pin, dual row, SMT socket	Samtec	SSW-110-F-D-VS-K
J11(bottom side)	16 pin, dual row, SMT socket	Samtec	SSW-116-F-D-VS-K
J12(top side)	16 pin, dual row, SMT header	Samtec	TSM-116-01-T-DV
J13-J15(top side)	10 pin, dual row, SMT header	Samtec	TSM-110-01-T-DV
JP01–JP05, JP07, JP08	3 Pin header	Samtec	TSW-103-07-L-S
JP06, JP09–JP16	2 Pin header	Samtec	TSW-102-07-L-S
R01, R04, R05, R08, R13, R16, R19, R22, R58, R59, R60–R65	10.0 Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW080510R0F
R02, R03, R06, R07	4.99 k Ω , 0805, 0.10 W, 1%	Vishay/Dale	CRCW08054991F
R11, R12, R14, R15, R17, R18, R20, R21, R24, R26, R52, R54	2.0 k Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08052001F
R23, R28, R29, R51, R56, R74	10.0 k Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08051002F
R25,R27	2.49 k Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08052491F
R30–R39	200 Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08052000F
R40–R46, R48, R72, R73	1.0 k Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08051001F
R47	511 Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08055110F
R53, R55	Not installed		
R57, R70, R71	100 k Ω , 0805, 0.100 W, 1%	Vishay/Dale	CRCW08051003F
R66, R67	1.50 k Ω , 1206, 0.125 W, 1%	Vishay/Dale	CRCW12061501F
R68	332 Ω , 1206, 0.125 W, 1%	Vishay/Dale	CRCW12063320F

Designators	Description	Manufacturer	Mfg. Part Number
R69	511 Ω , 1206, 0.125 W, 1%	Vishay/Dale	CRCW12065110F
U01	AMC1210	Texas Instruments	AMC1210RHA
U02	ADS1204	Texas Instruments	ADS1204I
U03	OPA4354	Texas Instruments	OPA4354U
U04	OPA2347	Texas Instruments	OPA2347UA
U05-U07	SN74LVC2G157	Texas Instruments	SN74LVC2G157DCT
U08	OPA1632	Texas Instruments	OPA1632UA

3.1 AMC1210 Modular EVM Schematic

The schematic diagram is shown on the following page.

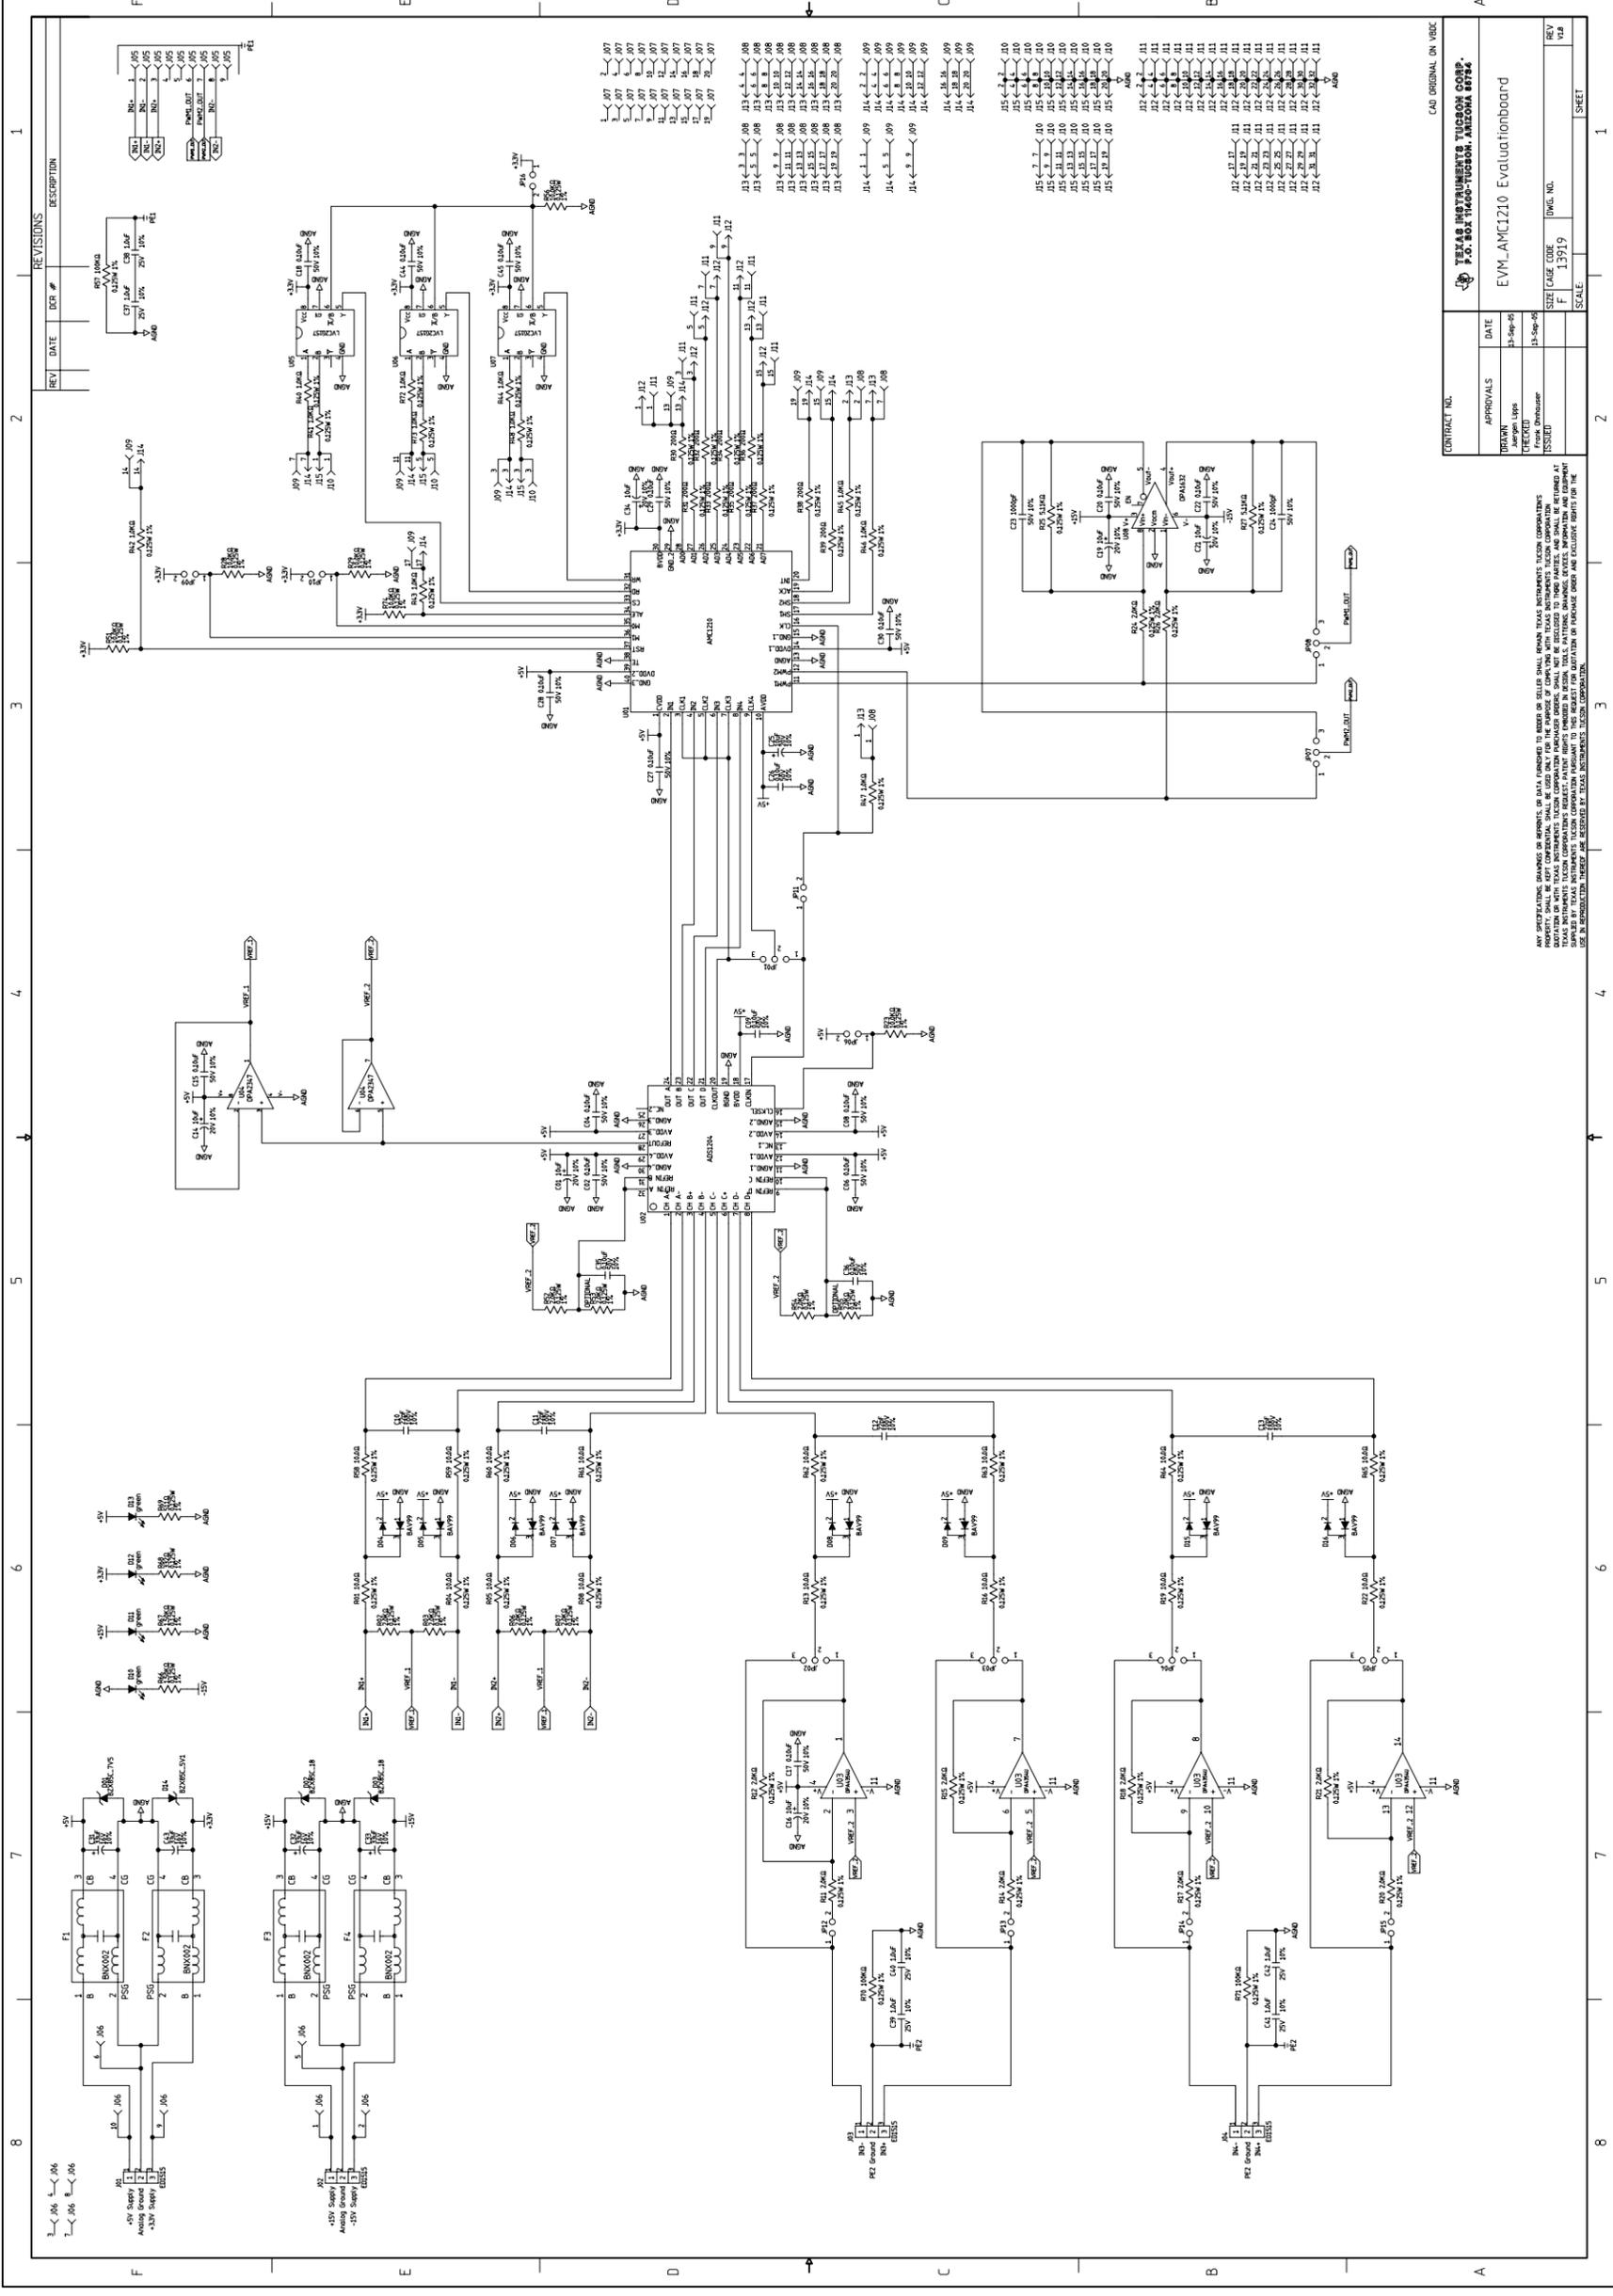

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

REV	DATE	DES #	DESCRIPTION
1			

CONTRACT NO.

APPROVALS

DATE

THROWN

CHECKED

FROM ORIGINATOR

DATE

DATE

THROWN

CHECKED

FROM ORIGINATOR

DATE

DATE

DATE

ANY SPECIFICATIONS, DRAWINGS OR REPORTS OF DATA FURNISHED TO BUYER OR SELLER SHALL REMAIN THE PROPERTY OF TEXAS INSTRUMENTS CORPORATION. BUYER AND SELLER SHALL INDEMNIFY AND HOLD TEXAS INSTRUMENTS CORPORATION HARMLESS FROM AND AGAINST ALL SUCH CLAIMS, DAMAGES AND LOSSES, INCLUDING REASONABLE ATTORNEY'S FEES, IN CONNECTION WITH THE PERFORMANCE OF THIS AGREEMENT. TEXAS INSTRUMENTS CORPORATION HEREBY DISCLAIMS ANY WARRANTY, INCLUDING MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. BUYER'S USE OF THIS DOCUMENT IS LIMITED TO THE SPECIFIC APPLICATION AND DESIGN FOR WHICH IT IS INTENDED. BUYER'S USE OF THIS DOCUMENT FOR ANY OTHER APPLICATION IS AT BUYER'S SOLE RISK. BUYER'S USE OF THIS DOCUMENT FOR ANY OTHER APPLICATION IS AT BUYER'S SOLE RISK. BUYER'S USE OF THIS DOCUMENT FOR ANY OTHER APPLICATION IS AT BUYER'S SOLE RISK.

CAUTION: ORIGINAL ON WEBIC

TEST LAB INSTRUMENTS & TUCSON CORP.
P.O. BOX 10000 TUCSON, ARIZONA 85724

EVM_AMC1210 Evaluationboard

SCALE: 1:1

SHEET 1 OF 1

EVALUATION BOARD/KIT IMPORTANT NOTICE

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive.**

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.**

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit www.ti.com/esh.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

FCC Warning

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

EVM WARNINGS AND RESTRICTIONS

It is important to operate this EVM within the input voltage range of +15 V to -15 V and the output voltage range of 0 V to 5 V.

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 30°C. The EVM is designed to operate properly with certain components above 60°C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2006, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DSP	dsp.ti.com	Broadband	www.ti.com/broadband
Interface	interface.ti.com	Digital Control	www.ti.com/digitalcontrol
Logic	logic.ti.com	Military	www.ti.com/military
Power Mgmt	power.ti.com	Optical Networking	www.ti.com/opticalnetwork
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
RFID	www.ti-rfid.com	Telephony	www.ti.com/telephony
Low Power Wireless	www.ti.com/lpw	Video & Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2007, Texas Instruments Incorporated