


# SNAP® Link Serial Wireless Adapters

## QUICK START: PLEASE READ THIS FIRST

### Step 1


- Apply power to Unit 1 using either the wall plug or a PC.
- Apply power to Unit 2

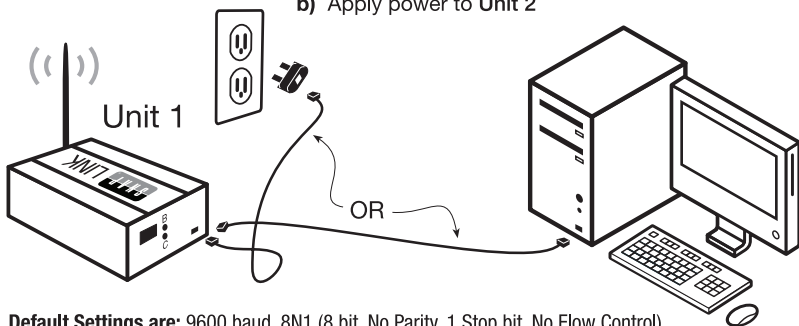

**Default Settings are:** 9600 baud, 8N1 (8 bit, No Parity, 1 Stop bit, No Flow Control)

### Step 2

- Press and Hold the MODE button for over 5 seconds; Release when LED "A" turns RED. It will now Flash Red.
  - Standing near the first unit, Press and Hold the MODE button on Unit 2; Release when LED "A" turns Red. The units should be paired.
- LED "A" will show a solid Green LED once pairing is successful.
  - A flashing Amber color indicates successful pairing, but with a weak signal.*

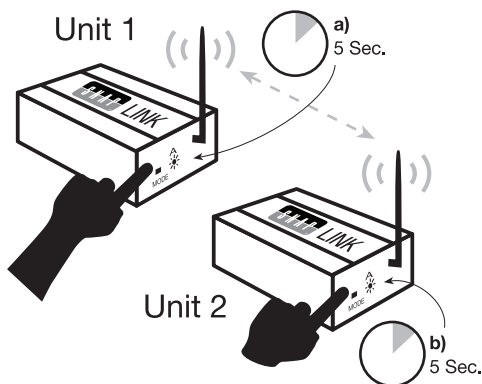

#### How to Reset to Factory Defaults:


- Unplug the device.
- While holding down the MODE button, plug device back into a power source and wait until all LEDs turn Amber, about 6 seconds.
- Release MODE Button. LED "A" turns off to indicate success.

#### How to Drop out of Pairing Mode:

- Hold down the LED "A" button for 5 seconds on one of the paired units.
- It will drop out of paired state and go back into "pairing mode", indicated by the flashing red LED "A". If you click once quickly on that same unit, it should "re-pair" to the unit it was previously paired with.

### Step 3

#### Connecting Units to existing devices

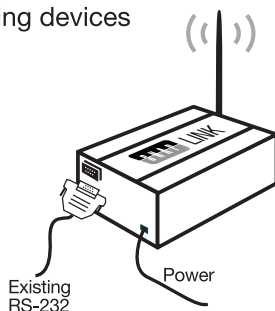


## SNAP® Link Serial Wireless Adapters

# QUICK START: PLEASE READ THIS FIRST

Everyone at **Synapse Wireless** appreciates your purchase. We're saving trees, reducing waste, and ensuring you have the most up-to-date versions by providing our documentation and software online.

- User documentation can be downloaded here:  
<http://www.synapse-wireless.com/SNAPLink/doc>
- Download SNAP EasySet configuration software to access additional configuration options using a Windows, Mac or Linux computer here:  
<http://www.synapse-wireless.com/SNAPLink/EasySet>
- Some parameters may be changed without using EasySet software by using the 8 bit Dip Switch inside the unit, which is discussed further in the user documentation.

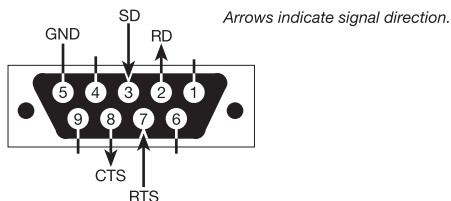

**RS-232 (DB-9) Pin Out**  
Standard DCE



Wireless Technology to Control and  
Monitor Anything from Anywhere™

500 Discovery Drive  
Huntsville, Alabama 35806  
256 852-7888  
[synapse-wireless.com](http://synapse-wireless.com)